


# **VANTAGE**

**Bill Acceptor** 

Quick Start Guide

 


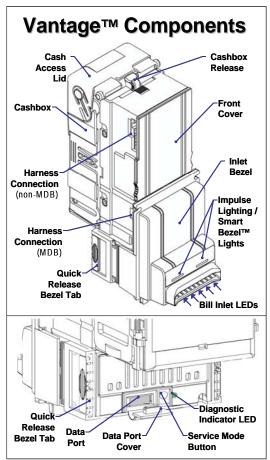


# Diagnostic Flash Codes

F	lash Code	Validator Status
ıal	GRN (solid)	Sales Mode / OK
Operationa	grni x 1	Coupon Teach *
Ope	grni x 2	Service Mode
ing	YEL x 1	Clean Unit
Warr	YEL x 2	Service Unit
vice	RED X 1	Cashbox Full
of Ser	RED x 2	Clear Bill Path
Out	<b>RED</b> x 3	Out of Service

<sup>\*:</sup> See Service Manual for more info on Coupon Teach.



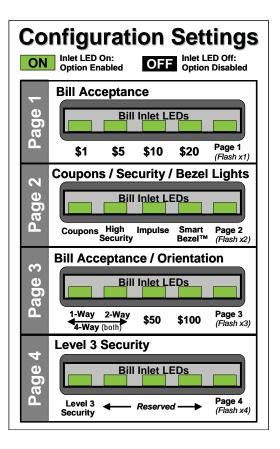



## **To Configure Options**

		-	
#	Action	Mode	Diagnostic Light
1.	Hold button until Diagnostic LED flashes.	Service	GRN x 2
2.	Remove Lower Housing	Config	OFF
3.	Set Options As Desired (see Options Navigation below)	Config	OFF
4.	Re-install Lower Housing. Inlet LEDs flash 5 times confirming options are saved.	Sales or Ready	GRN
5.	Test Unit to Ensure Pr	oper Setup.	

# **Options Navigation**

 SERV Press once	Scrolls to <u>next set</u> of options within current Page.
SERV Hold for next Page	Scrolls to <u>next Page</u> of options.



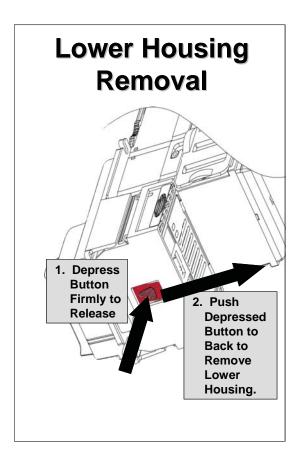


## **Add / Remove Coupons**

#	Action	Mode	Diagnostic Light	Bill Inlet LEDs
1.	Hold button until Diagnostic LED flashes.	Coupon Teach	GRN (flash)	GRN (flash)
2.	Insert Coupon to be Added or Removed.			
	ADD 0	oupon		
3a.	Coupon accepted and returned.	Coupon Teach	GRN (fast rate)	GRN (fast rate)
4a.	Automatically returns to Sales Mode. Coupon <u>addition</u> complete.	Sales	GRN (solid)	GRN (cycle)
	REMOVE Coupon			
3b.	Coupon disabled and returned.	Coupon Teach	GRN (fast rate)	GRN (fast rate)
4b.	Automatically returns to Sales Mode. Coupon removal complete.	Sales	GRN	GRN (cycle)
Coupon <b>NOT</b> Recognized				
3c.	Coupon returned. Inlet LEDs flash at original rate.	Coupon Teach	GRN (flash)	GRN (flash)
4c.	Insert another coupon (see Step 2 above)  OR			
-,0.	SERV Hold button to return to Sales Mode (note unit returns automatically after 40 secs of inactivity).			

### **Option / Dip Switch Settings**

Note: There are no switches on MDB only models.

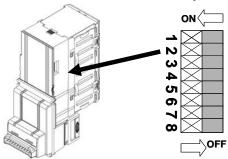


Pulse Timing	Switch 1	Switch 2
50 / 50mS	ON	ON
150 / 150mS	ON	OFF
Custom	OFF	ON
Parallel (Credit Line)	OFF	OFF

	ON	OFF
Switch 3	4 Pulse / \$	1 Pulse / \$
Switch 4	Always	Host
SWILCH 4	Enabled	Enabled
Switch 5	Serial	Pulse
Switches 6 - 8	Reserved	

**Note:** "Custom" has a default setting of 200 / 200mS but can be reconfigured for a different timing. Please contact your Coinco Sales Rep for more information.

# Quick Release Bezel Operation

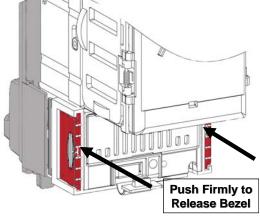


- Push firmly on Quick Release Tabs using a screwdriver tip. Tabs will move towards bezel and latch.
- Once both tabs are latched, the bill acceptor will separate from the bezel.
- To reattach, push bill acceptor body firmly onto bezel until it locks.

## Smart Bezel™

### Communicates to Customer Which Bills Are Accepted

Feature not available on all models

#### Denotes acceptance of both \$1 and \$5 bills.

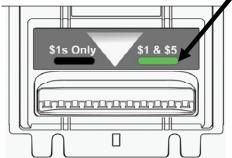

- \$1 & \$5 Is Lit When: Both bills accepted and change can be made for them.
- \$1s Only Is Lit When: Change can only be made for \$1 bills.

Note: For correct operation, make sure \$1 and \$5 bills are enabled (see Configuration Settings).

For more information on the Vantage™, please see the Operation and Service Manual, available at www.coinco.com

Notes	

# For technical support on this or any other Coinco product, contact your nearest Coinco Branch Office/Service Center.

Coin Acceptors, Inc. U.S. World Headquarters 300 Hunter Avenue St. Louis, MO 63124 (314) 725-0100 1-800-325-2646

Coin Acceptors, Inc.
Canadian Headquarters
1-435 Four Valley Drive
Concord (Toronto), Ontario
L4K 5X5 Canada
Phone: (905) 738-5777
1-800-387-9300

### email: techsupport@coinco.com www.coinco.com

Coinco Publication # 928997 Rev.2 05/2008 Printed in the U.S.A.