



Setting "PAR" or "Float" on  
Guardian GLX Model Coin Changers



# Set "PAR" By Coin Rolls

Example Shows Guardian GLX Model GLXUS-EF

1) Press and hold  until display reads

SET PAR  
By Coin Rolls

2) Once released, the lowest coin will be displayed, in this case nickels

PAR = \$0.00  
N 0 D -- Q 0 \$ --

Select Roll  
Adjust Count

3) Press  to increase the number of "nickel" coin rolls. Set it for 2. That brings the Par value to \$4.00

PAR = \$4.00  
N 2 D -- Q 0 \$ --

4) Press  to move to the next higher coin. Since we are using a EF, the next highest coin is the quarter

PAR = \$4.00  
N 2 D -- Q 0 \$ --

5) Press  to increase the number of "quarter" coin rolls to 4. The Par value is now \$44.00

PAR = \$44.00  
N 1 D -- Q 4 \$ --

6) To set the \$44 "PAR" value,  
Press  to [Enter]

Press Enter To  
Accept \$44.00

Par Set To  
\$44.00

Saving And  
Exiting

End Of Procedure

## Set "PAR" By Coin Value

1) Press  and display reads

MAIN MENU  
Audit

2) Press  and display reads

MAIN MENU  
Setup

3) Press  and display reads

SETUP  
Par

4) Press  and display reads

PAR  
Set Par

5) Press  and display reads

SET PAR  
By Coin Rolls

6) Press  and display reads

SET PAR  
By Coin Value

7) Press  and display reads

◀▶ will alternate between coins.  
▲▼ will increase/decrease the value of the coin selected. The "PAR" total value will be displayed. Example shown has a \$32 "PAR"

PAR = \$ 00.00  
◀▶N = ▲▼\$ 0.00

PAR = \$ 32.00  
◀▶N = ▲▼\$ 0.00

8) Press  to save the "PAR" setting

Press Enter To  
Accept \$32.00

Par Set To  
\$32.00

Saving And  
Exiting

End Of Procedure

## 2 Digit Cassette Hot-Key Function

- 1) Press and hold  and release when display reads

CASSETTE  
Enter ID:

Use the Guardian GLX keypad and enter the unit's 2 digit cassette ID code. Valid cassettes for U.S. are **BB, BD, BE or EF**

- 2) As soon as the 2 digit code is entered, the changer will automatically save this configuration

CASSETTE  
Enter ID: **BD**

Saving And  
Exiting

End Of Procedure

**NOTE:** Holding the "Menu" button down longer than 10 seconds will lock the keypad. To unlock the keypad, press and hold the "Menu" button for 10 seconds and the display will show "Keys Unlocked"

### Keypad Navigation



### Cassette Information

Cassette ID	Coin Denomination Tube Position						Coin Rolls Max			
	A	B	C	D	E	F	5¢	10¢	25¢	\$1
BB	25¢	10¢	5¢	5¢	25¢	25¢	4	2	6	-
BD	\$1	\$1	25¢	5¢	10¢	25¢	2	2	4	6
BE	25¢	25¢	5¢	5¢	25¢	25¢	4	-	8	-
EF	25¢	25¢	5¢	25¢	25¢	25¢	2	-	10	-



Coin Acceptors, Inc.  
World Headquarters  
300 Hunter Avenue  
St. Louis, MO 63124-2013  
(314) 725-0100 or 1-800-325-2646